



MOVING FLAME LED CANDLE
INDOOR LOCATION RATING
UNSCENTED WHITE PARAFFIN WAX


OVERVIEW

This "Happy Camper" Moving Flame LED Candle is made of white colored unscented paraffin wax and has a warm white LED that illuminates a realistic dancing flame. The candle has an outside diameter of 3.5" and an oblique top with a front height of approximately 4.5" and a rear height of approximately 5.6". The candle is remote control enabled, and the optional hand-held remote control (not included) can turn your candles ON and OFF and provides a great way to control hard to reach candles and protects the wax from unnecessary handling. A 3-way sliding switch on the bottom of the candle allows you to turn the candle ON and OFF and to put the candle in the TIMER mode (5-hours ON/19-hours OFF). This cycle will repeat while the switch is in the TIMER position. When the switch is in the "ON" or "TIMER" position, the candle can be turned "off" and "on" by blowing on the flame. The candle uses 2 x 1.5VDC D-cell alkaline batteries (not included) and has a battery life of approximately 500-hours.

BATTERY INSTALLATION & MAINTENANCE

The candle requires 2 x 1.5VDC D-cell alkaline batteries (not included). To install the batteries:

- Turn the candle over and remove the battery compartment cover by pushing the tab while pulling the cover out and away from the candle.
- Install the batteries observing the correct polarity. (+) and (-) are indicated on the inside of the battery compartment cover.
- Replace the battery compartment cover.
- Remove the batteries from the candle when not in use for extended periods of time.

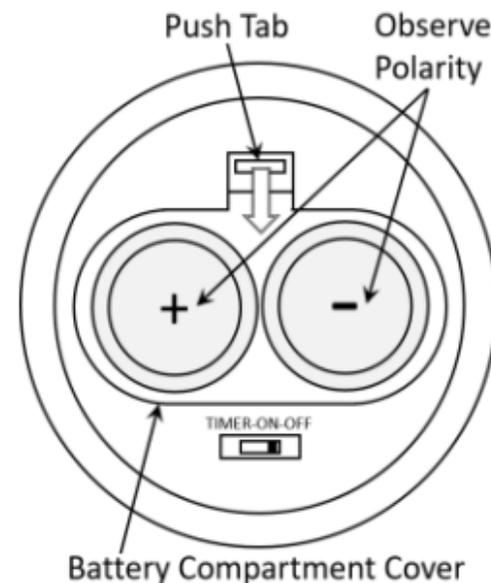


OPERATION

To turn the candle ON: Slide the 3-way switch on the bottom of the candle to the ON position.

To turn the candle OFF: Slide the 3-way switch on the bottom of the candle to the OFF position.

To set the TIMER: Slide the 3-way switch on the bottom of the candle to the TIMER position.

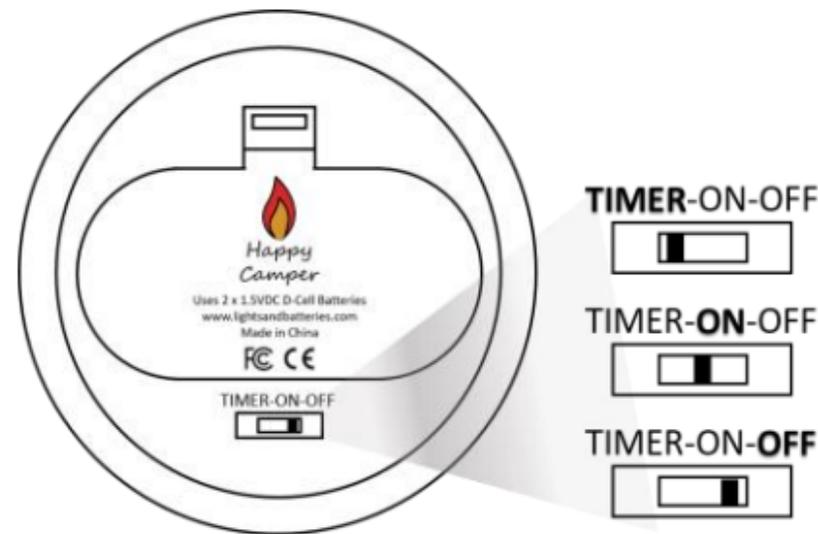

LOW BATTERY INDICATOR

The “Happy Camper” candle will begin flashing or flickering when the batteries are too weak to properly power the candle. Replace the batteries if the candle begins flashing or flickering.

TIMER FUNCTION

When the 3-way switch on the bottom of the “Happy Camper” candle is placed in the TIMER position, the candle will enter the TIMER mode and will remain ON for 5-hours, and then the candle will turn OFF for 19-hours. The candle will repeat this ON/OFF cycle while the switch is in the TIMER position. The TIMER mode can be exited by sliding the switch to either the ON or OFF position. The optional hand-held remote control will not control the candle when the switch is in the TIMER or OFF position.

REMOTE CONTROL

The “Happy Camper” candle is remote control enabled and can be turned ON and OFF with the hand-held remote control (not included). The 3-way switch on the bottom of the candle must be in the ON position for the remote control to control the candle. The remote control will not control the candle if the switch is in the TIMER or OFF position. When the switch is in the ON position, and the candle is turned OFF with the remote control, the candle will continue to draw a small amount of power. If the candle is going to be turned OFF with the remote control and left OFF for an extended period of time, it is recommended to slide the switch to the OFF position in order to preserve the battery life.

BLOW “OFF” / BLOW “ON” FEATURE

When the 3-way switch on the bottom of the candle is in the "ON" or "TIMER" position, blow on the moving flame to turn the candle "off" or back "on" again.

GENERAL CARE

Clean the candle as needed with a soft, dry cloth. If needed, use a damp cloth with a mild household soap. Note that the color of the candle may vary from candle to candle and may also vary over time.

FCC COMPLIANCE

This device has been tested and found to comply with the limits for a class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTIONS & WARNINGS

KEEP AWAY FROM SMALL CHILDREN

- This product contains small parts, which, if removed, can pose a choking hazard to small children.
- Rated for indoor use only. Keep away from heat, direct sunlight, freezing temperatures, moisture, and rain.
- Do not mix alkaline batteries with carbon-zinc, NiMH, or NiCd batteries.
- Do not mix old and new batteries. Replace all batteries at the same time.
- Please recycle used batteries or dispose of them per state and local guidelines. Do not dispose of used batteries in fire.
- Make sure batteries are installed with the correct polarity. Improperly installed batteries can result in damage to the product.
- Do not leave batteries in product for extended periods of time or when product is being stored.