



LUMINARA™

WITH
Realistic Flame Technology

Relax and let it glow.

1-877-90-LUMIN (58646)

www.myluminara.com

©2012 LUMINARA WORLD WIDE, LLC

COVERED BY U.S. PATENT

8070319 AND OTHER U.S. AND FOREIGN INTELLECTUAL PROPERTY

Made in China

NOTE: The instruction manual that came with your product is incorrect. Please disregard and reference this user manual for any and all product information relating to The Luminara Outdoor Dream Candles:

5" Candle #48140

7" Candle # 48141

9" Candle # 48142

THIS PRODUCT IS INTEDNED FOR INDOOR AND OUTDOOR USE.

This candle is made of ABS Plastic, not Wax.

BATTERY INSTALLATION & MAINTENANCE

1. Your candles requires two (2) D batteries (sold separately).
2. Turn candle over and remove cover from the battery compartment.
3. Insert two D batteries as illustrated in the battery compartment.
4. Replace battery compartment cover.

LOW BATTERY INDICATOR – Your Luminara™ candle will begin flashing/blinking when the batteries are too weak to properly power the candle. If your candle begins flashing/blinking, replace the batteries.

Remove batteries once they have run out of power or if the product has been left unused for an extended period of time.

OPERATION

ON/OFF:

To turn the candle on, press the power button on the bottom of the candle one time.

To turn the candle off, press the power button on the bottom of the candle three times.

TIMER:

To set the timer, press the power button on the bottom of the candle two times. The candle will remain on for five (5) hours from the time that you place the candle in “TIMER” mode. After five (5) hours of run time the candle will automatically turn off for nineteen (19) hours. It will repeat the same cycle daily until the user resets the timer. To reset the timer, press the power switch to the “OFF” position and then to “TIMER” at the desired start time.

One push = ON, Second push = TIMER, Third push = OFF.

LIMITED WARRANTY

Your Luminara™ candle is guaranteed to be free from manufacturing defects for a period of ninety (90) days from the date of purchase. This warranty does not cover damage due to neglect, misuse, and exposure to excessive heat or improper battery installation. Please return your product to the place of purchase with the original sales receipt for repair or replacement if repair is not possible. You may also contact us by e-mail at mail@myluminara.com for warranty information. Proof of purchase is required.

MAITENANCE

Clean as needed with a soft, dry cloth. If needed, use a damp cloth with a mild household soap. Note that the color may vary from candle to candle, and the color and scent (if included) may fade over time.

CAUTION

- ◆ Your Luminara™ candle is made of ABS Plastic and is flammable. Do not attempt to light this candle. Doing so could result in personal injury or damage to the light and electrical components.
- ◆ The Luminara™ ABS plastic “outdoor” candles are intended for indoor and outdoor use. Although, the outdoor candle has been manufactured to withstand all weather conditions, be sure to take good care of the candle in harsh conditions.
- ◆ The Luminara™ plastic “outdoor” candle is made to withstand outdoor use.
- ◆ Your Luminara™ candle is breakable. Dropping it can break or damage the ABS plastic shell and can also damage internal components, and will void the warranty.
- ◆ This product contains small parts, which, if removed, can pose a choking hazard. Keep away from small children.
- ◆ Insert batteries as displayed on the battery compartment. Failure to insert the batteries correctly may result in damage to your candle or personal injury and will void the warranty.
- ◆ Do not mix old and new batteries. Do not mix Alkaline, Carbon-Zinc, NiMH, or NiCad batteries. Please recycle used batteries or dispose them safely in accordance with the battery manufacturer’s recommendations.
- ◆ Always purchase the correct size and grade battery most suitable for the intended use.
- ◆ Replace all batteries of a set at the same time.
- ◆ Clean the battery contacts and also those of the device prior to battery installations.
- ◆ Ensure the batteries are installed correctly with regard to polarity (+ and -)
- ◆ Remove batteries from equipment, which is not to be used for an extended period of time.
- ◆ Remove used batteries promptly.

FCC COMPLIANCE

This device has been tested and found to comply with the limits for a class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning this device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between this device and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.