

Usage Instructions

Lighted Water Lantern Products

How to operate the products

On/Off/Timer Mode:

To turn the product ON: Move the switch to the "ON" position.

To turn the product OFF: Move the switch to the "OFF" position.

To turn the product on Timer: Move the switch to the "TIMER" position.

The light will flash once to indicate the timer is set. 6 hours timer, repeats every 18 hours.

Power instruction

You can choose to power product by battery power or USB cord.

Battery options:

The product requires alkaline battery (not included) to function.

Please refer the battery type used as specified on product tag.

Battery type used:

3 C batteries or 3 AA batteries or 4AA batteries

Do not use rechargeable batteries. Do not mix battery types.

Do not mix old & new batteries.

To install the batteries:

1. Open battery compartment, push clip inward and pull up.
2. Insert batteries into the compartment in the proper polarity.
3. Close the battery compartment.

A USB cord is included, not intend to use other components.

IMPORTANT: The USB cord DOES NOT recharge the batteries.

Product does not include USB power adaptor.

Do not use with USB power adaptor exceeding 1.5 Amps and maximum 5V DC.

Tips for using

The glitter may have settled to the bottom. Please gently flip the product upside down and repeat 2-3 times to loosen glitter from the bottom. To avoid damage DO NOT shake, doing so will result in damage or breakage to the motor.