



ILLURE REMOTE CONTROL OPERATIONAL GUIDE

Remote Functions:

Your Illure remote has (4) timer settings – 4hr, 6hr, 8hr and 10hr. These all operate on a 24 hr format. Your remote also has an Inner Glow feature. This will allow you to adjust the brightness of the inside of the candle at any time. Simply use the - / + feature on the remote to set to your desired brightness.

****TO OPERATE THE REMOTE CONTROL WITH THE CANDLE PLEASE MAKE SURE THE SWITCH ON THE BOTTOM OF THE CANDLE IS MOVED INTO THE “ON” POSITION**** *see fig 1. Below*

Fig 1.

